



1884157

O-White Cottage Console

Parts and Hardware List


A.	Top Assembly	1 pc
B.	Legs	4 pcs
C.	Drawer Stoppers	2 pcs
D.	Allen Head Bolts	8 pcs
E.	Lock Washers	8 pcs
F.	Flat Washers	8 pcs
G.	Allen Head Wrench	1 pc
H.	Optional Allen Head Screwdriver Bit	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.


Hardware Illustrations




C. Drawer Stopper

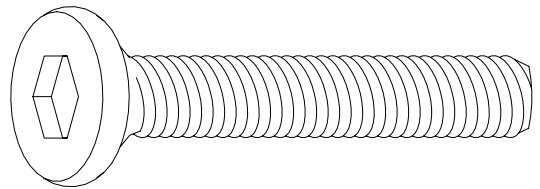

D. Allen Head Bolt



E. Lock Washer

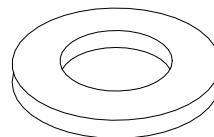

F. Flat Washer

1884157

O-White Cottage Console

Assembly Instructions

1. **Attach Legs (B)** Remove the drawer and place the Top Assembly (A) upside down on a soft surface. Align the pre-drilled holes in the Legs (B) with the pre-threaded holes in the corner blocks of Top Assembly (A). Secure with Allen Head Bolts (D), Lock Washers (E) and Flat Washers (F) using Allen Head Tool (G or H). See Illustration #1.
2. **Attach Drawer Stoppers (C)** Put the item upright. Insert the drawer into the Top Assembly (A). Insert two Drawer Stoppers (C) into the pre-drilled holes in the gliders. See Illustration #2.

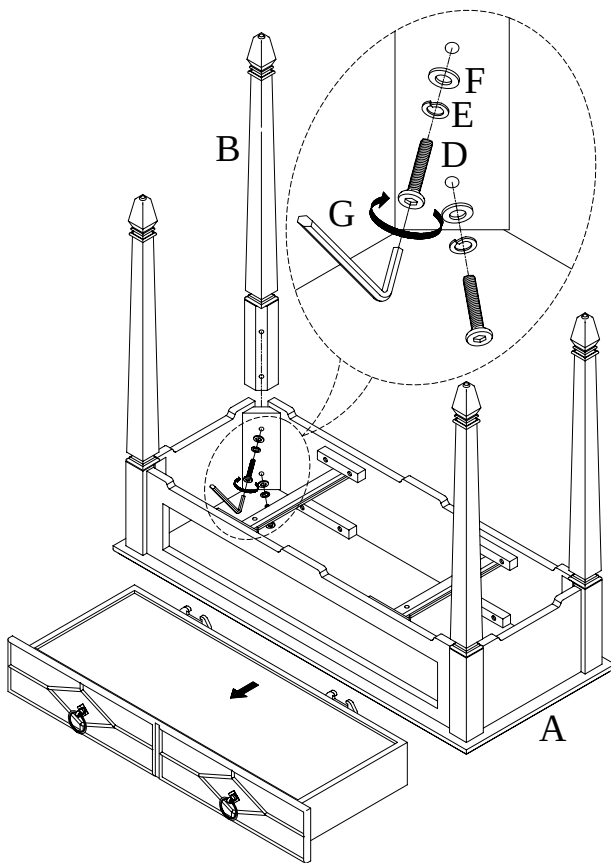


Illustration #1

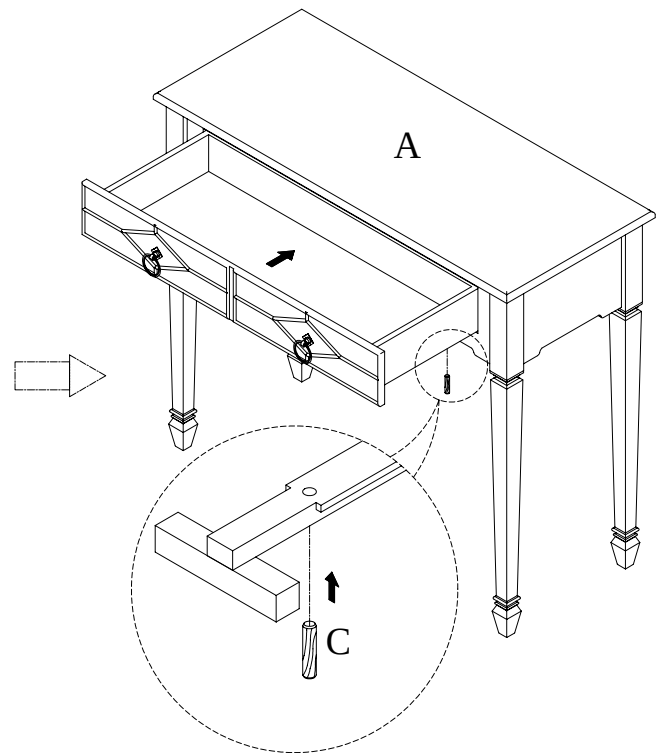


Illustration #2